

Databank - Technical Bulletin

MR-J2S / MR-J3 / MR-ES Brake resistors

Brake Resisters

European and Japanese part number for external break resister differs. This guide show a comparison between the Japanese part numbers shown in the manuals to the available parts in Europe.

MR-J2S	MR-J3	MR-ES	Brake resistors (Japan type)	Resistance (Ω)	Power (W)		Brake resistors (MEU type)	Resistance (Ω)	Power (W)
MR-J2S-10 to MR-J2S-100	MR-J3-10 to MR-J3-100	MR-E-10 to MR-E 100	MR-RB032	40	30	<=>	MR-RFH75-40	40	150
MR-J2S-20 to MR-J2S-100	MR-J3-20 to MR-J3-100	MR-E-20 to MR-E 100	MR-RB12	40	100	<=>	MR-RFH75-40	40	150
MR-J2S-70 to MR-J2S-100	MR-J3-70 to MR-J3-100	MR-E-70 to MR-E 100	MR-RB32	40	300	<=>	MR-RFH220-40	40	400
MR-J2S-200 to MR-J2S-500	MR-J3-200 to MR-J3-350	MR-E-200	MR-RB30	13	300	<=>	MR-RFH400-13	13	600
MR-J2S-200 to MR-J2S-500	MR-J3-200 to MR-J3-350	MR-E-200	MR-RB50	13	500	<=>	MR-RFH400-13	13	600
MR-J2S-700	MR-J3-500 to MR-J3-700		MR-RB31	6,7	300	<=>	MR-RFH400-6.7	6,7	600
MR-J2S-700	MR-J3-500 to MR-J3-700		MR-RB51	6,7	500	<=>	MR-RFH400-6.7	6,7	600
MR-J2S-60_4			MR-RB1L-4	270	100	<=>	MR-PWR-T-150-270	270	150
	MR-J3-60_4 to MR-J3-100_4		MR-RB1H-4	82	100	<=>		82	
MR-J2S-100_4	MR- J3-60_4 to MR-J3-100_4		MR-RB3M-4	120	300	<=>	MR-PWR-T-400-120	120	400
MR-J2S-200_4			MR-RB3H-4	80	300	<=>	MR-PWR-T-600-80	80	600
MR-J2S-200_4			MR-RB5H-4	80	500	<=>	MR-PWR-T-600-80	80	600
MR-J2S-350_4 to MR-J2S-500_4	MR-J3-200_4 to MR-J3-350_4		MR-RB3G-4	47	300	<=>	MR-PWR-T-600-47	47	600
MR-J2S-350_4 to MR-J2S-500_4	MR-J3-200_4 to MR-J3-350_4		MR-RB5G-4	47	500	<=>	MR-PWR-T-600-47	47	600
MR-J2S-700_4	MR J3-500_4 to MR-J3-700_4		MR-RB34-4	26	300	<=>	MR-PWR-T-600-26	26	600
MR-J2S-700_4	MR- J3-500_4 to MR-J3-700_4		MR-RB54-4	26	500	<=>	MR-PWR-T-600-26	26	600